


Designed for safety. Built for fun.

How to Measure for Windscreen

Materials needed:

- Pad (preferably with a grid)
- Pencil/Pen
- 100' or 300' tape measure
- 25' tape measure (for height)

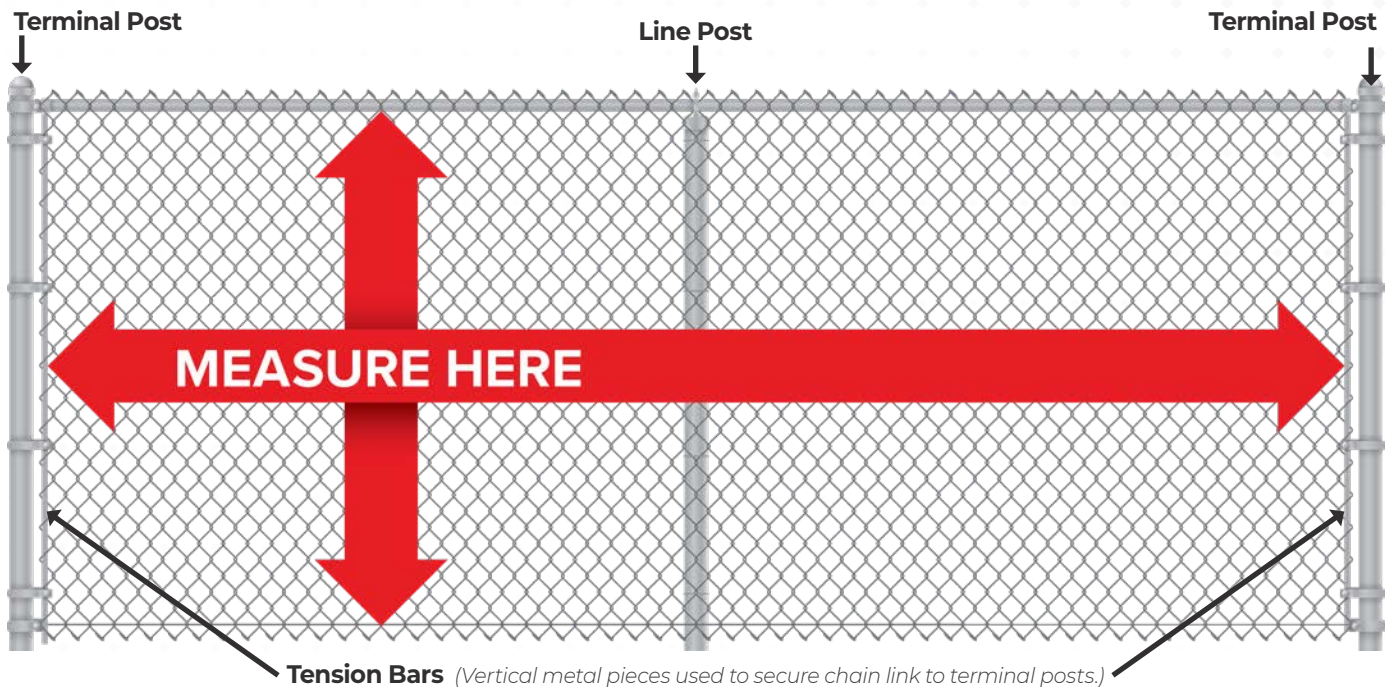

STEP 1

Draw layout of the site and include a landmark. Example: NW corner or starting at build etc.

STEP 2

Measure height of fence and notate on layout. Check height in multiple locations and use lowest height measurement.

STEP 3

Measure each section of fence from outside tension bar to outside tension bar. **IMPORTANT: for sections under 20' deduct 2" from measurement; for sections over 20' deduct 3"** and add this measurement. Each panel should not exceed 50'; round down to nearest half inch as needed.

STEP 4

Repeat same process for measuring gates. Check the height and measure outside tension bar to outside tension bar and deduct 2"

STEP 5

Assign each section a unique number on diagram; Your panels will be labeled with these numbers for easy identification. (Optional but recommended)